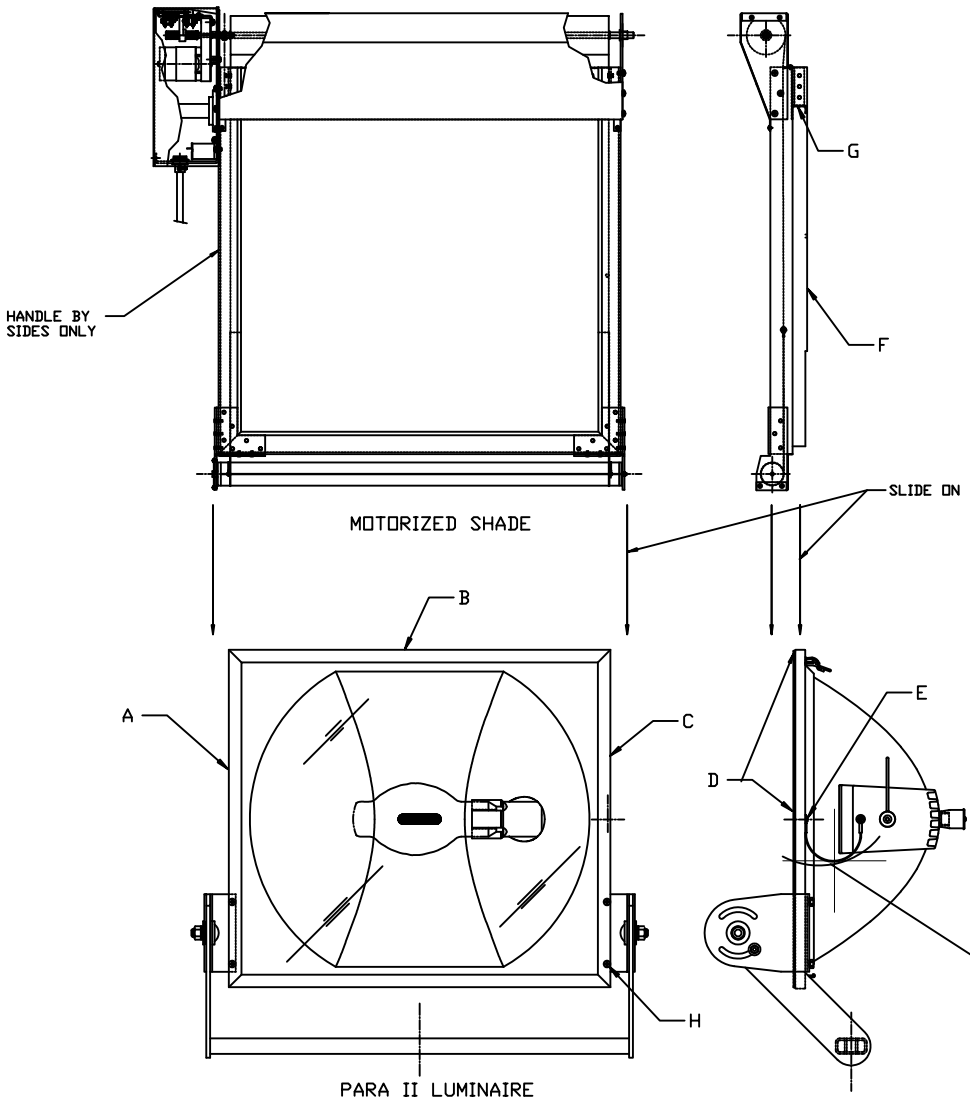

MOTORIZED SHADE ASSEMBLY TO THE PARA II LUMINAIRE

1. Check surfaces A, B, C, & D to make sure they are smooth and that nothing protrudes past them. On early Para II fixtures the screw heads (H) protude out past surfaces A and C slightly. This may cause a slight interference at assembly when the shade frame slides past these screws.

2. Remove #10-24 pan head screw (E) from the backside of the door frame. Leave the safety cable attached to the screw.

3. HANDLE THE MOTORIZED SHADE FRAME BY THE SIDES OF THE FRAME ONLY. Do not handle by the top, bottom, or motor covers. The motorized shade must be installed evenly to avoid binding.

4. Locate channels (F & G) of the motorized shade frame, these channels accept the door frame of the Para II luminaire. Slide the motorized shade frame onto the door frame from the top as shown until surface G is resting on surface B. The Motorized shade must be inserted evenly to avoid binding.

5. Reinstall the #10-24 pan head screw (E) with the safety cable attached through the hole in the back of the Motorized Shade and into the hole in the Para II luminaire frame.

SYM	CHANGE MADE	DR:	CAR:	DATE:

QUALIFIER: TOLERANCES .XX +/- .03, .XXX +/- .010; ANGULAR +/- 1 DEG.

VENDOR: DR: FRENSKO; REF:; M#:

DESCRIPTION: DATE: 2-23-99; IS: PRINT:; SHEET 1 OF 1

MATERIAL:

BLANK SIZE: FT, FT²

FINISH CODES: PRI N SEC

STERNER

TITLE: SHADE INSTALLATION INSTRUCTIONS

RATID NONE; P/N 7IS00641600; REV.

STERNER LIGHTING SYSTEMS, INC. 7575 CORPORATE WAY EDEN PRAIRIE, MN 55344-2022 PHONE: 612.906.7300 FAX: 612.906.7330

FILMED: